 


**ART. NO.**

102611-120-1  
102616-120-1  
102611-E-120-1  
102616-E-120-1  
102616-NW-120-1



# Orion G2











## INSTALLATION MANUAL

**⚠ Safety Notes:**


- The product must be installed, maintained, and operated as instructions below.
- Before starting installation of this product, make sure power supply is disconnected.
- Only to be installed by authorized electrician.
- Do not use abrasives or solvents when cleaning.
- Do not install the product if it appears damaged in any way. Check with manufacturer if in doubt.
- Do not modify this fitting in any matter as this will void warranty.
- Check protection class, if class I, it must be earthed.
- Disconnect power supply before maintenance or cleaning.

**⚠ Sikkerhetsinformasjon:**


- Følg installasjonsmanual for korrekt montering.
- Koble alltid fra strømmen før montering eller vedlikehold.
- Kan kun monteres av autorisert elektriker.
- Monter ikke produktet hvis det er synlig skade. Kontakt forhandler eller produsent.
- Bruk ikke løsemidler ved rengjøring
- Produktet skal ikke under noen omstendigheter endres eller modifiseres.
- Sjekk produktets isolasjonsklasse. Ved isolasjonsklasse I skal produktet jordes.

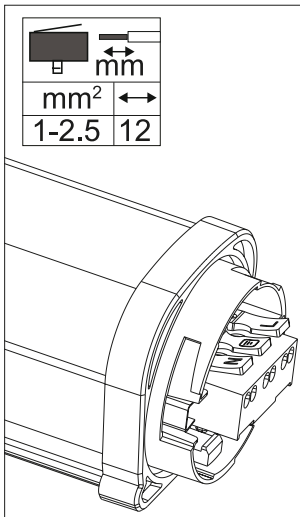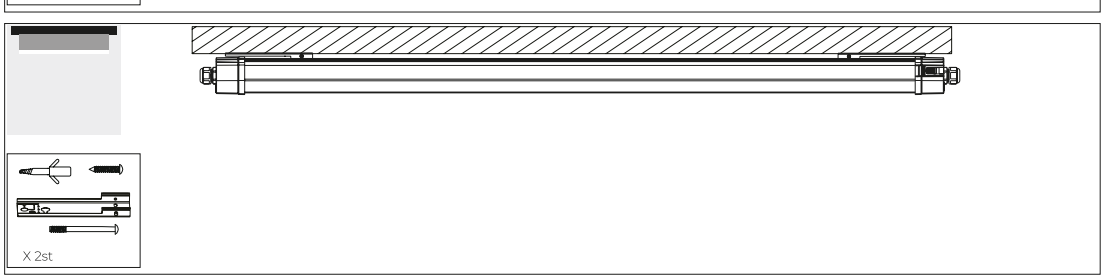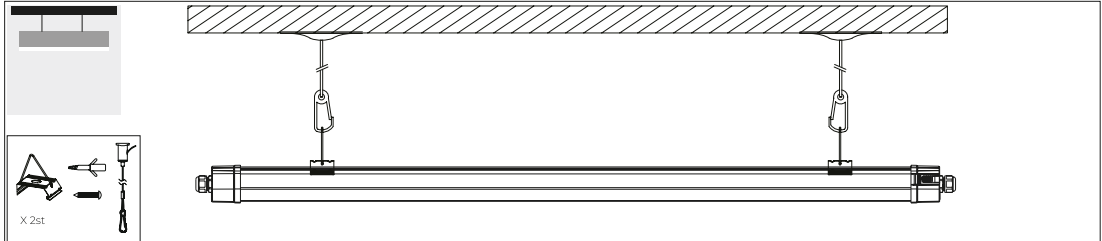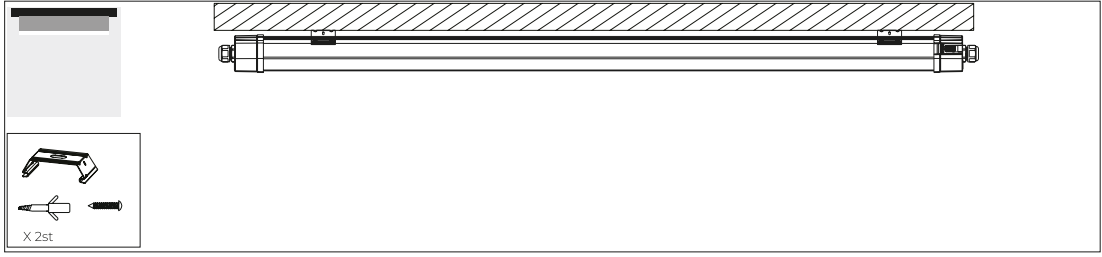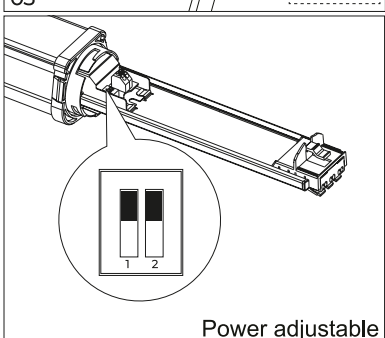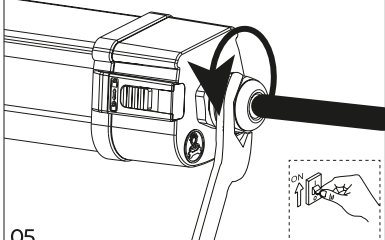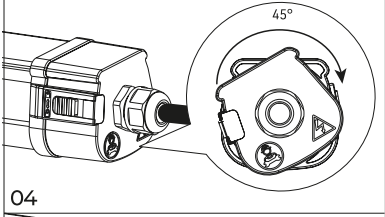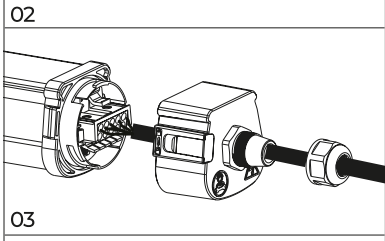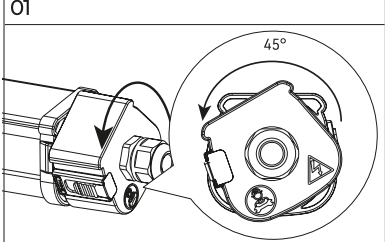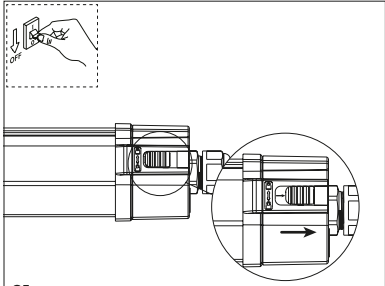


### 3 wires

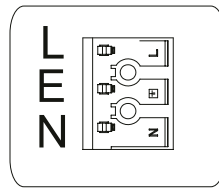


### 5 wires

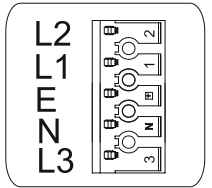

### Dimmable

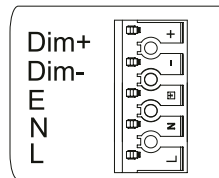

### DALI

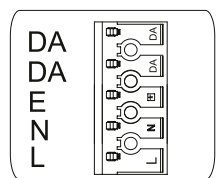

Linkable qty

Circuit breakers

Input Voltage	NX	NX	NX	NX
1200mm (230vac)	39 (19W)	31 (24W)	25 (30W)	21 (35W)
1500mm (230vac)	32 (23W)	36 (28W)	22 (34W)	18 (40W)
	25 (30W)	19 (38W)	17 (44W)	15 (50W)

	B10	B16	C10	C16
35W	24	38	40	64
40W	24	38	40	64
50W	16	26	27	44

Pull out the gear tray →

**! THE MODULE COULD BE TAKEN OUT FROM SIDE ONLY.**

SIZES	CCT	EET
600mm	4000/5000K	C
1200/1500mm	4000/5000K	B
600/1200/1500mm	3000/6500K	C

 

Replaceable (LED only) light source by a professional.

Replaceable control gear by a professional.


This product contains a light source of energy efficiency class <B/C>.

### Replace method:

1. Open the endcap and take out the module.
2. Remove the cables and plastic clips connecting the PCB board or screws on the power supply.
3. Replace the PCB board or driver with new one.

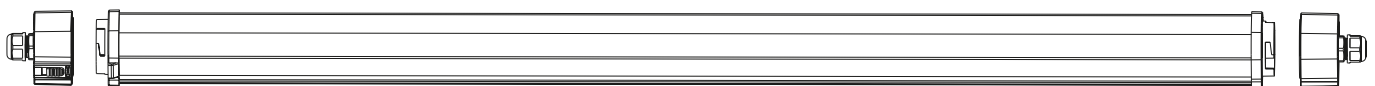

Replace the driver

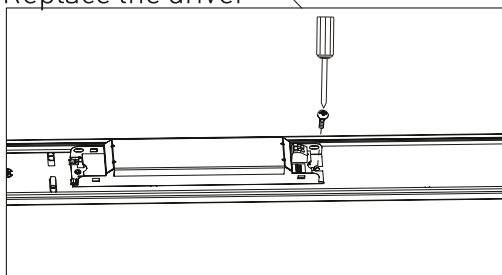

Replace LED module

